

Kratki vodič za upotrebu STARK M-L Električne škare sa priključnom baterijom



Stark M



Stark L




HR - Da biste preuzeli cjelovit priručnik s uputama, posjetite web stranicu www.campagnola.it ili skenirajte QR kod. Ovaj brzi vodič ne zamjenjuje priručnik proizvoda koji se u svakom slučaju mora pročitati i razumjeti u cijelosti.



POČETAK

1

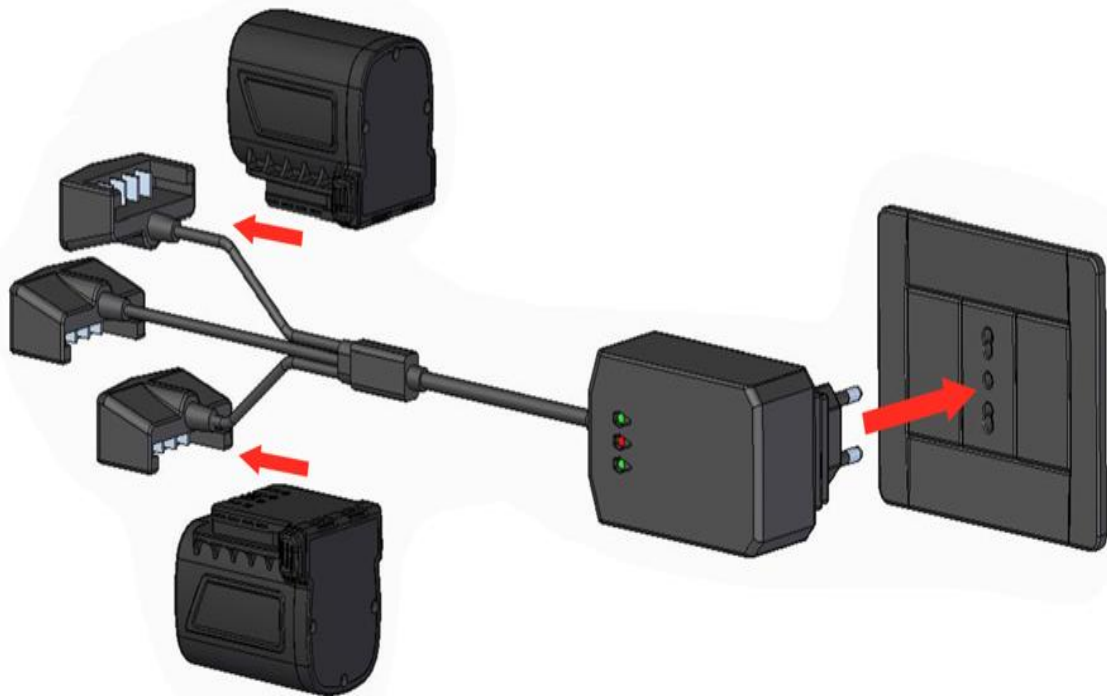


Prije prve upotrebe u potpunosti napunite baterije.

2



Umetnite
bateriju.

3

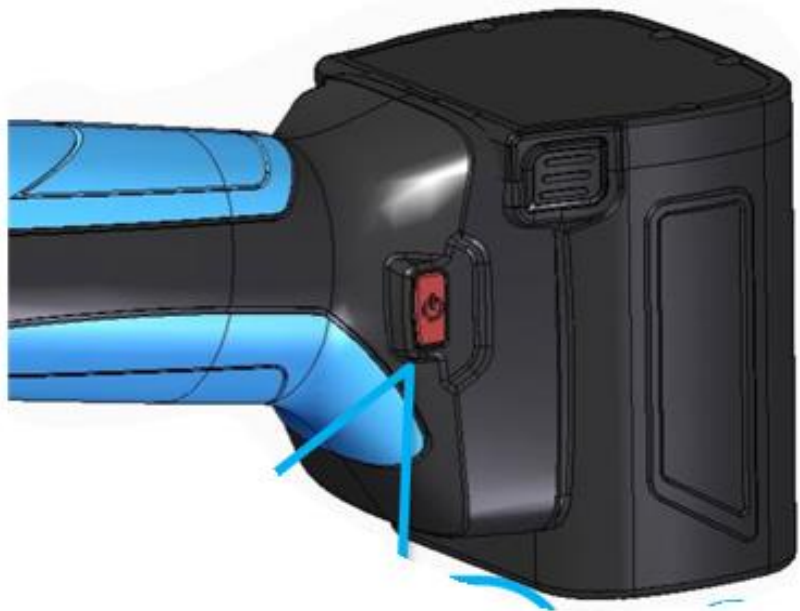


Pritisnite tipku za
uključivanje/isključivanje.
Zaslon se uključuje i
oglašava se zvučni signal.


4



Dva puta brzo pritisnite okidač,
da bi se otvorile oštrice, te da bi
se moglo upravljati škarama.

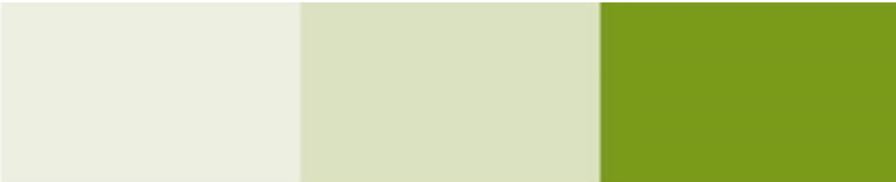


ZASLON

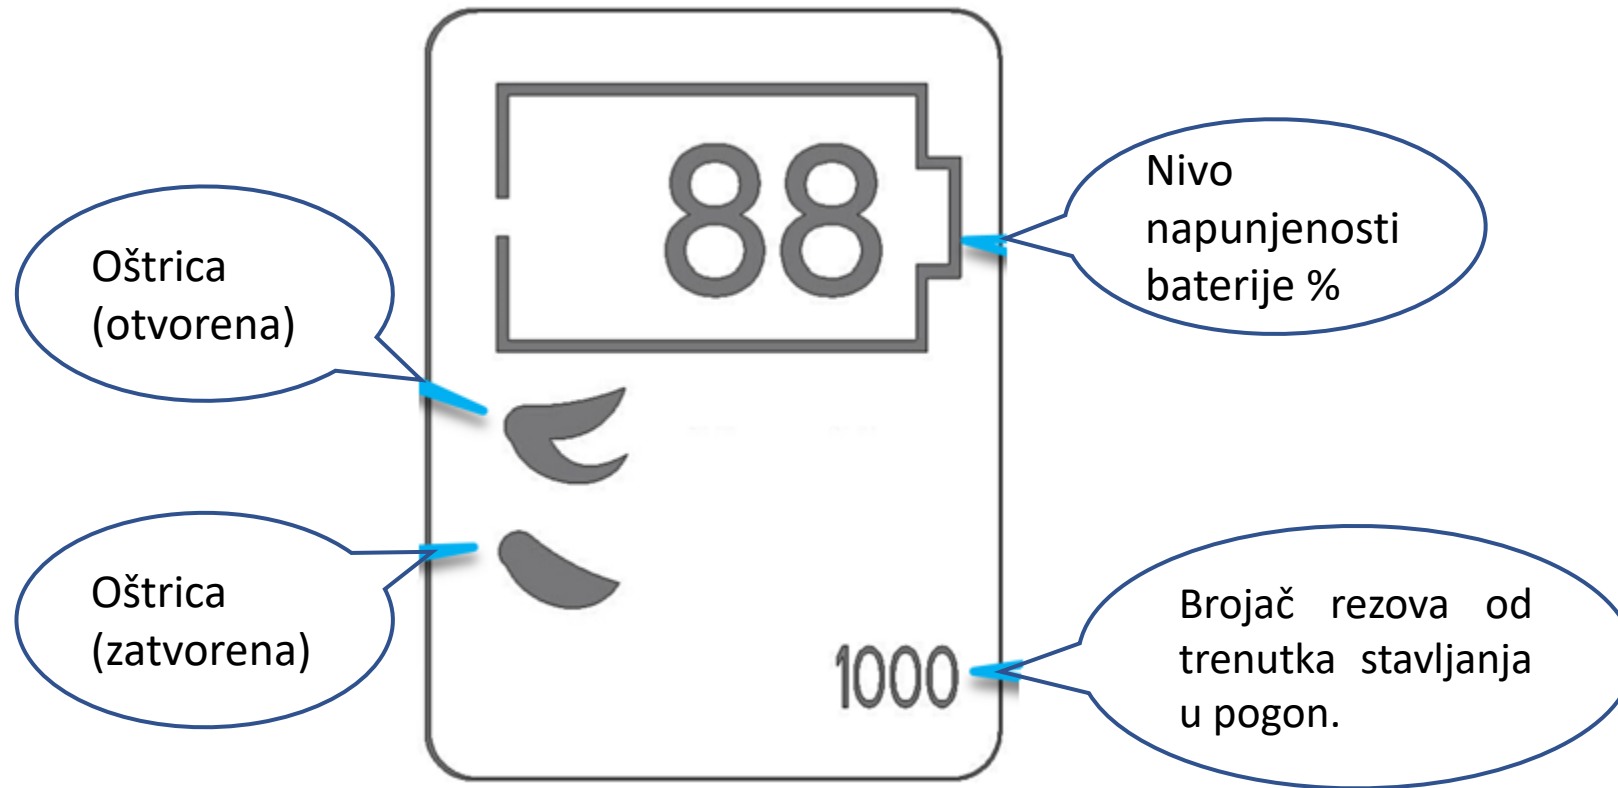

NAČINI OTVARANJA OŠTRICA

1

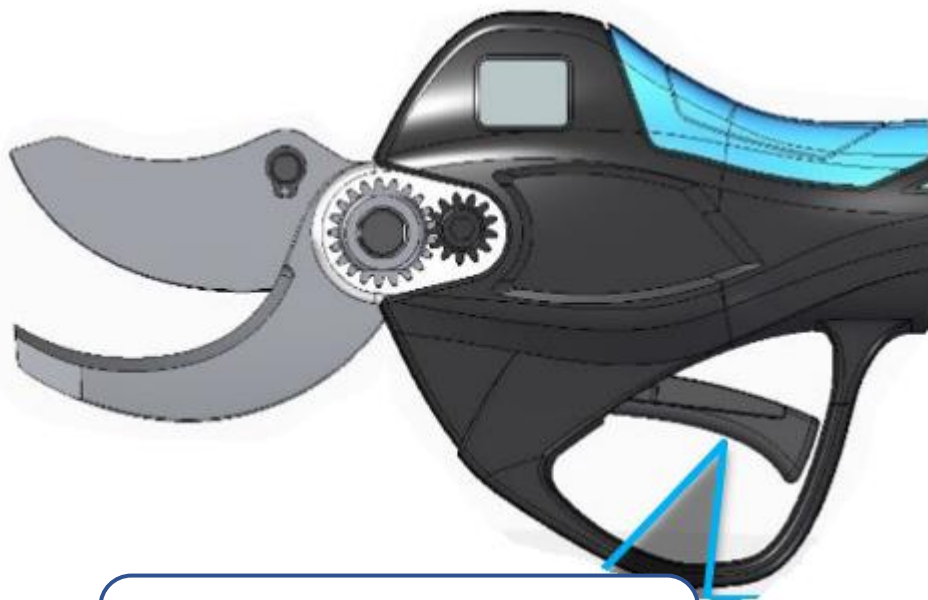

Držite okidač nategnut sve dok ne čujete zvučni signal.
70 % otvoreno


2



Držite okidač nategnut sve dok ne čujete zvučni signal.
100 % otvoreno

KRAJ RADNOG DANA

1

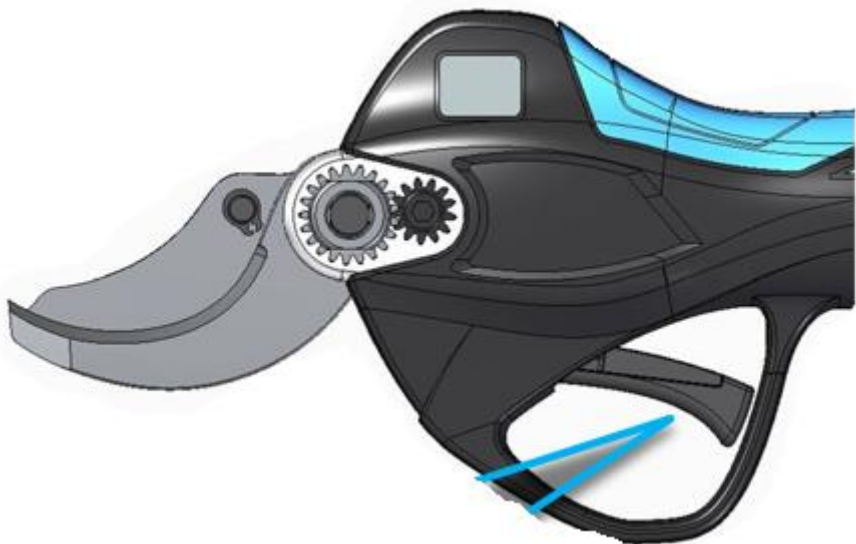

Okidač držite zategnut 3 sekunde kako bi se zatvorile oštrice.


2



Pritisnite dugme otvoreno/zatvoreno da biste isključili škare.




3

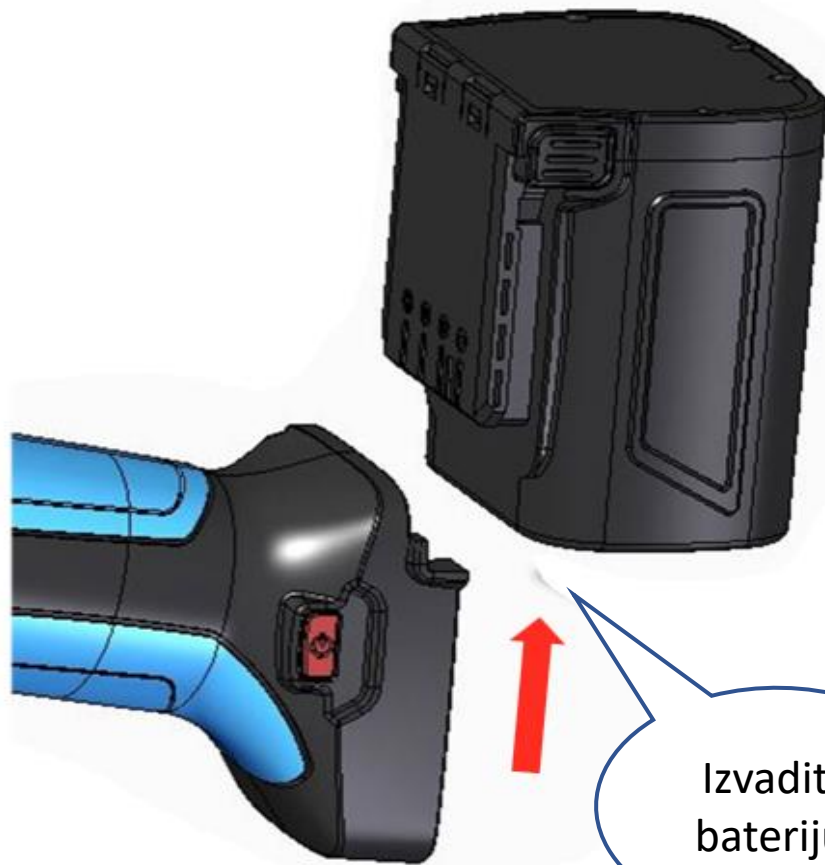

Izvadite bateriju.

4

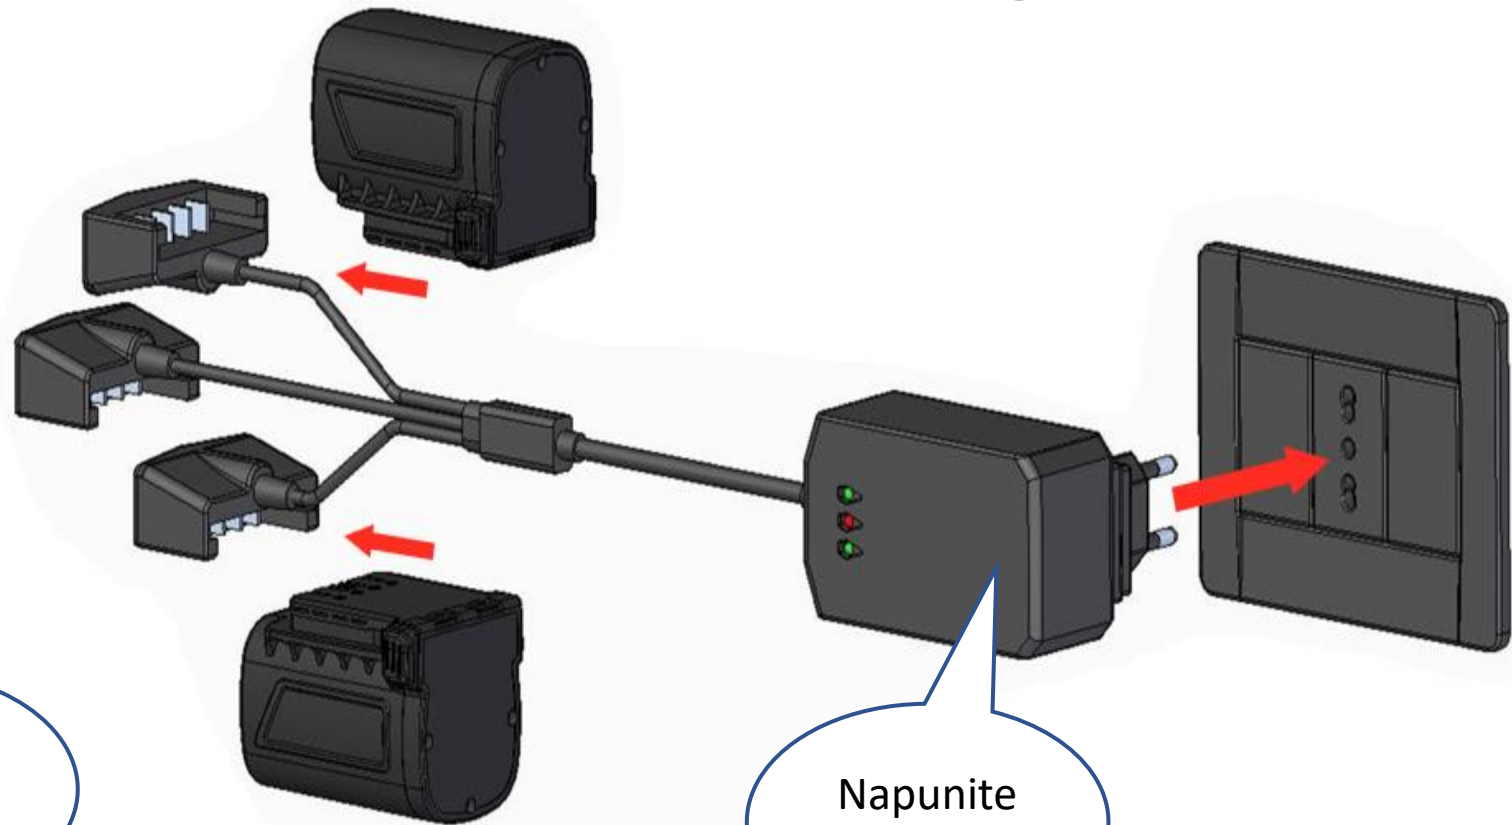

Napunite baterije.